

**GROVE**

TASTERKASTEN SPITZE  
PUSH-BUTTON BOX JIB


BILDTADEL  
PICTORIAL DISPLAY

**GMK 3050**  
**BE 710**  
**G 173**

09.02

**3007846-ETL E**

1/1

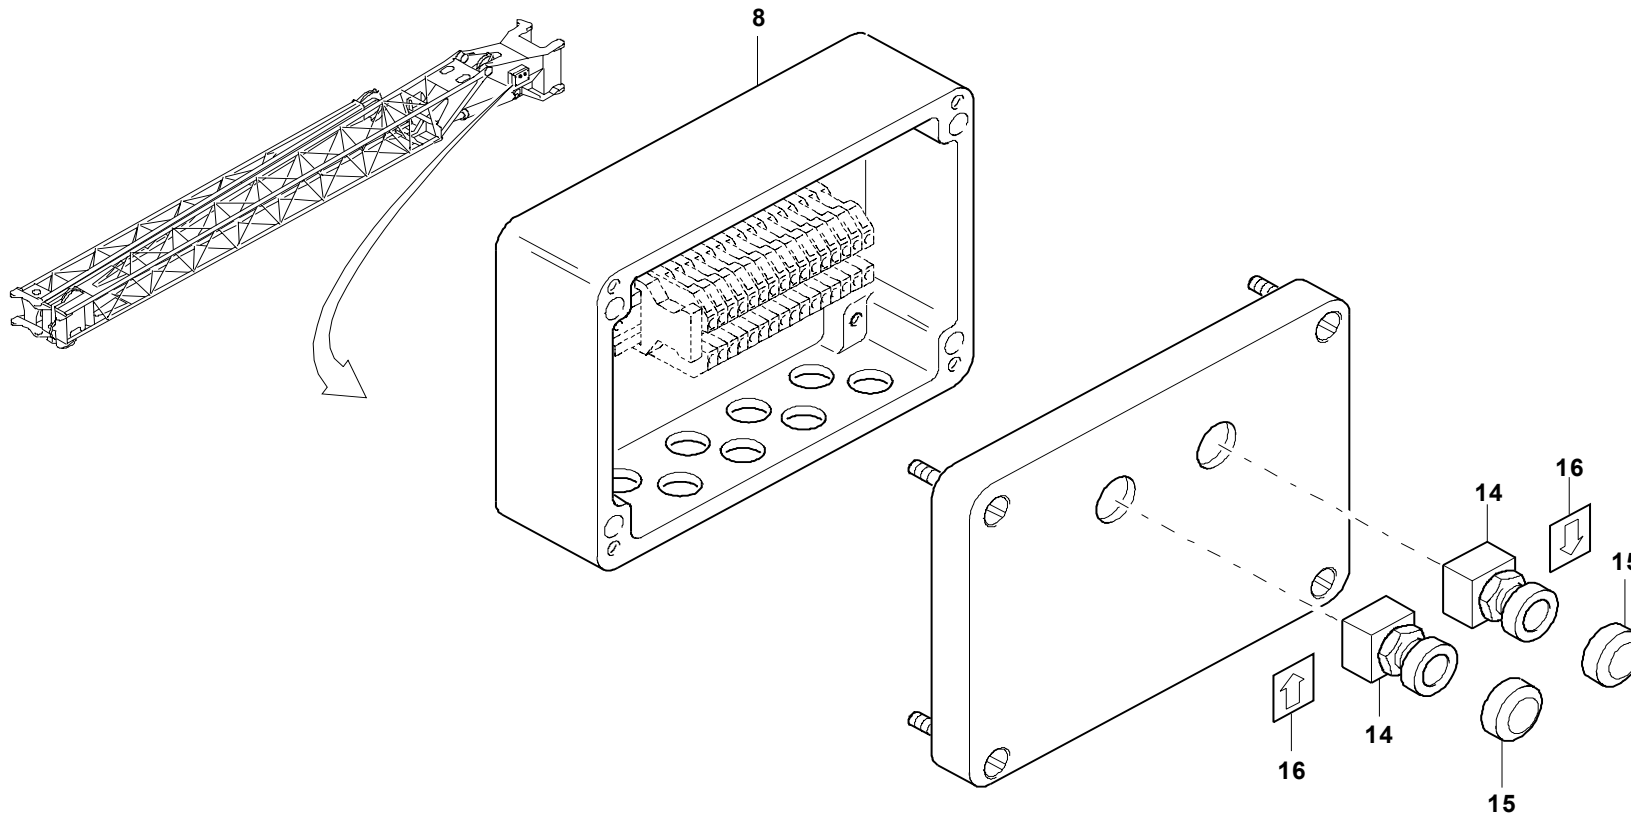

3007846-E-BL01  
0902-3050