

GROVE

TASTERKASTEN SPITZE (FUSS-STUECK)
 PUSH-BUTTON BOX JIB (FOOT SECTION)



BILDTADEL
 PICTORIAL DISPLAY

GMK 3050
BE 710
G 173

09.02

3007850-ETL D

1/1

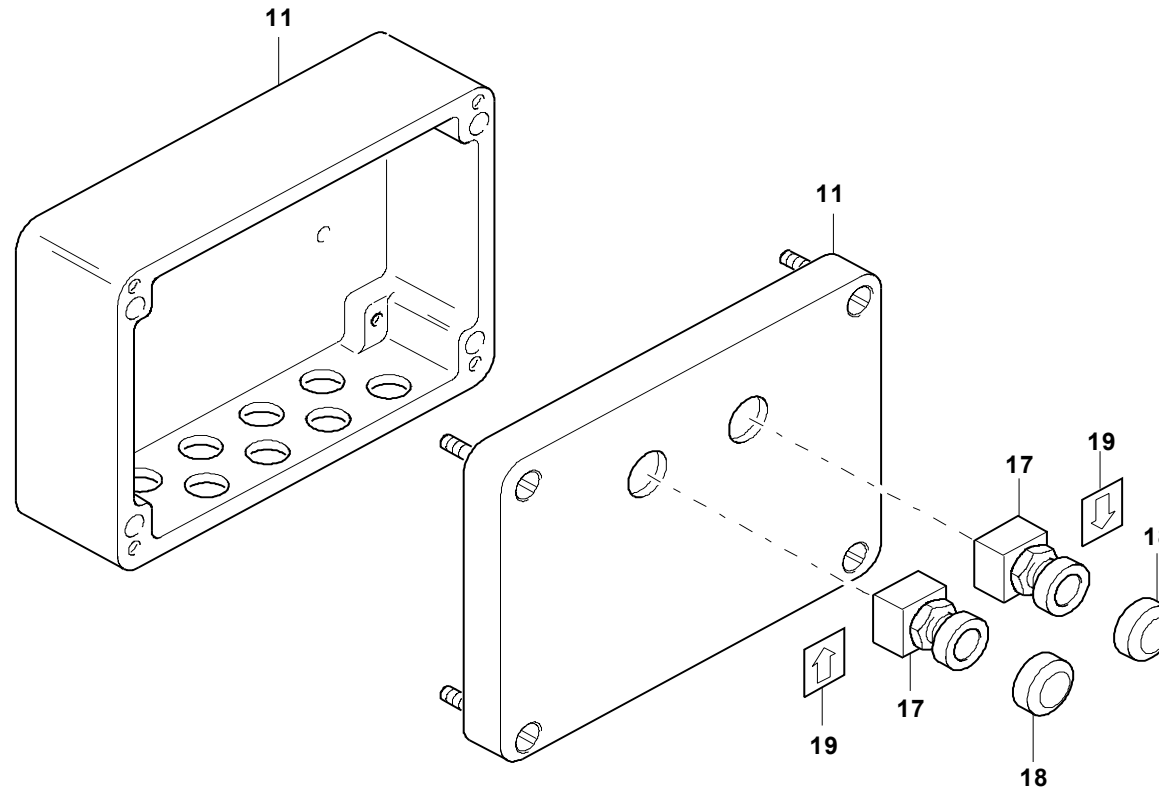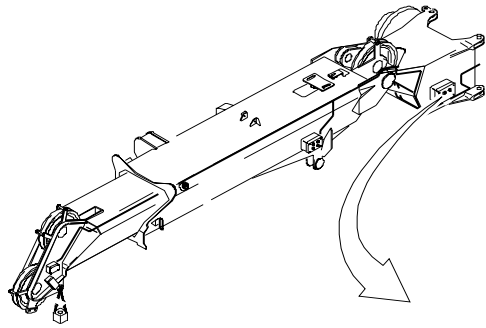

3007850-D-BL01
 0902-3050