


ELECT ASSY - ENGINE SUPER (CUMMINS)

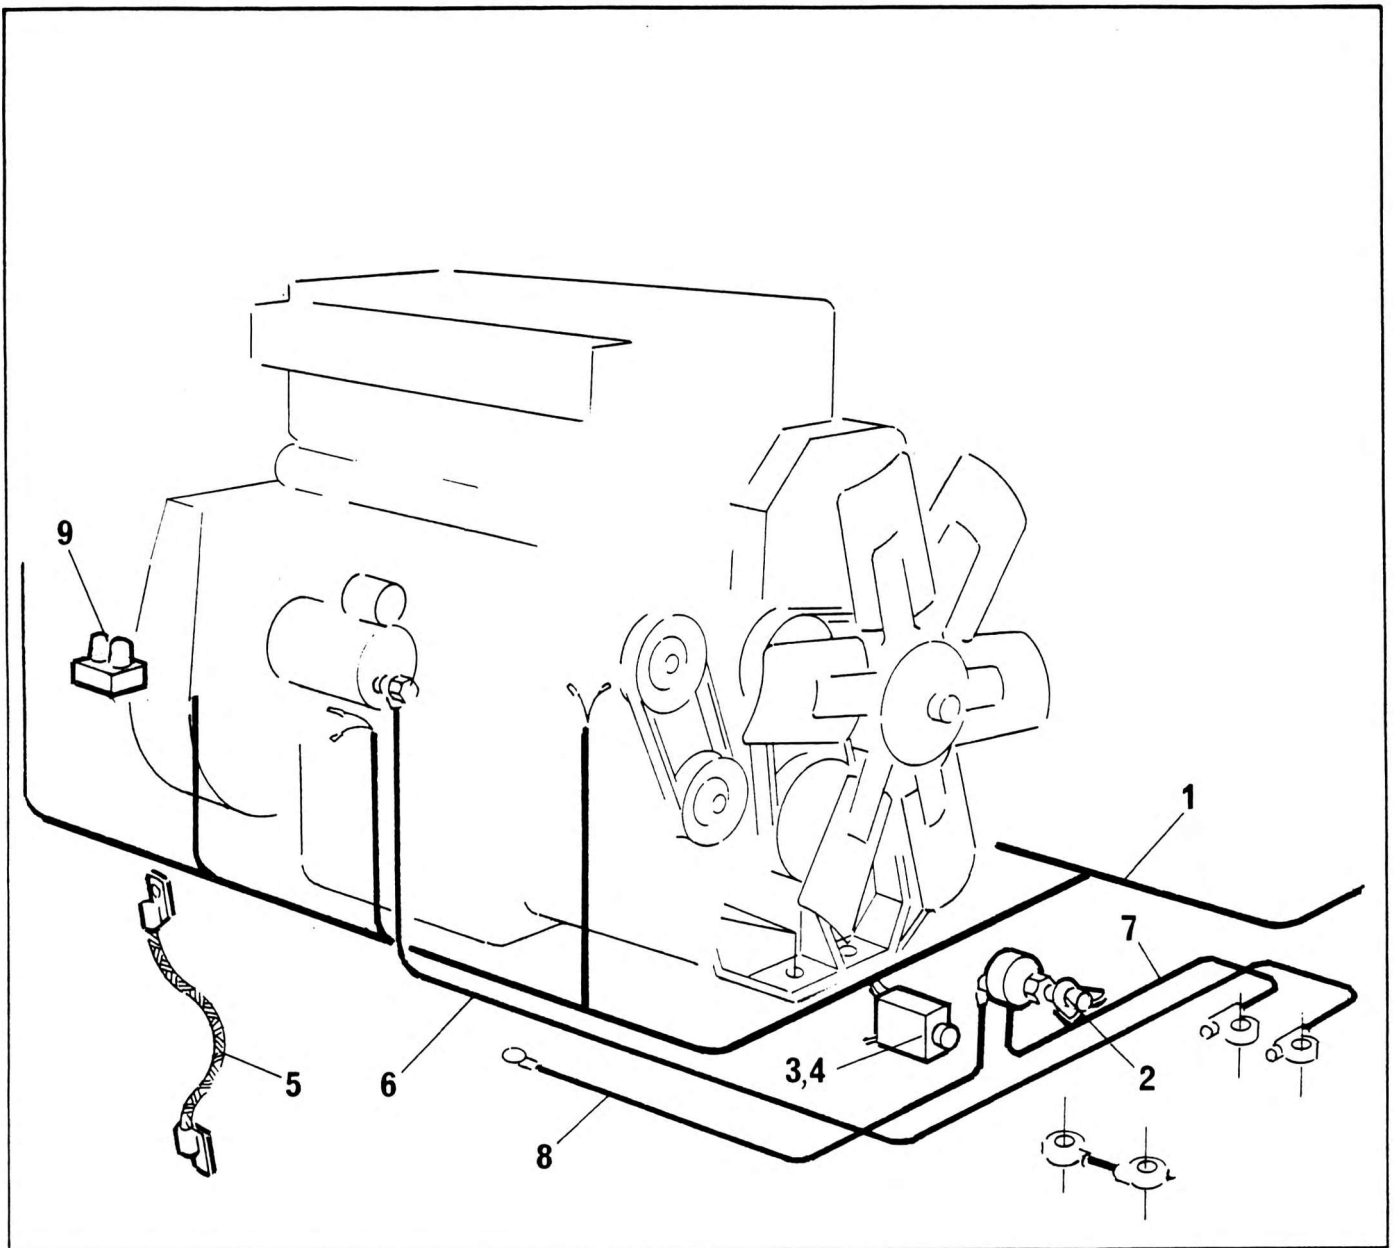

NO.	PART NO.	QTY.	DESCRIPTION	NO.	PART NO.	QTY.	DESCRIPTION
1	6-512-990258	1	Harness Assy Engine	8	6-246-990059	1	Lead Starter Neg to Earth - Earth to Master Switch
-	6-376-990633	1	Nameplate Battery	9	7-750-990013	1	Solenoid (Auxiliary Start)
2	7-872-990076	1	Battery Switch				
-	841113	1	Nameplate Overload Circuit Breaker				
3	8788791	1	Circuit Breaker Miniature 50 Amp				
4	8788792	1	Cover Splash Proof				
5	7-246-990142	1	Earth Strap - Engine Earth				
6	6-246-990109	1	Lead Battery - Bat Pos to Starter				
7	6-246-990032	1	Lead - Negative to Earth Bat to Master Switch				

6-978-990614
Issue No.01