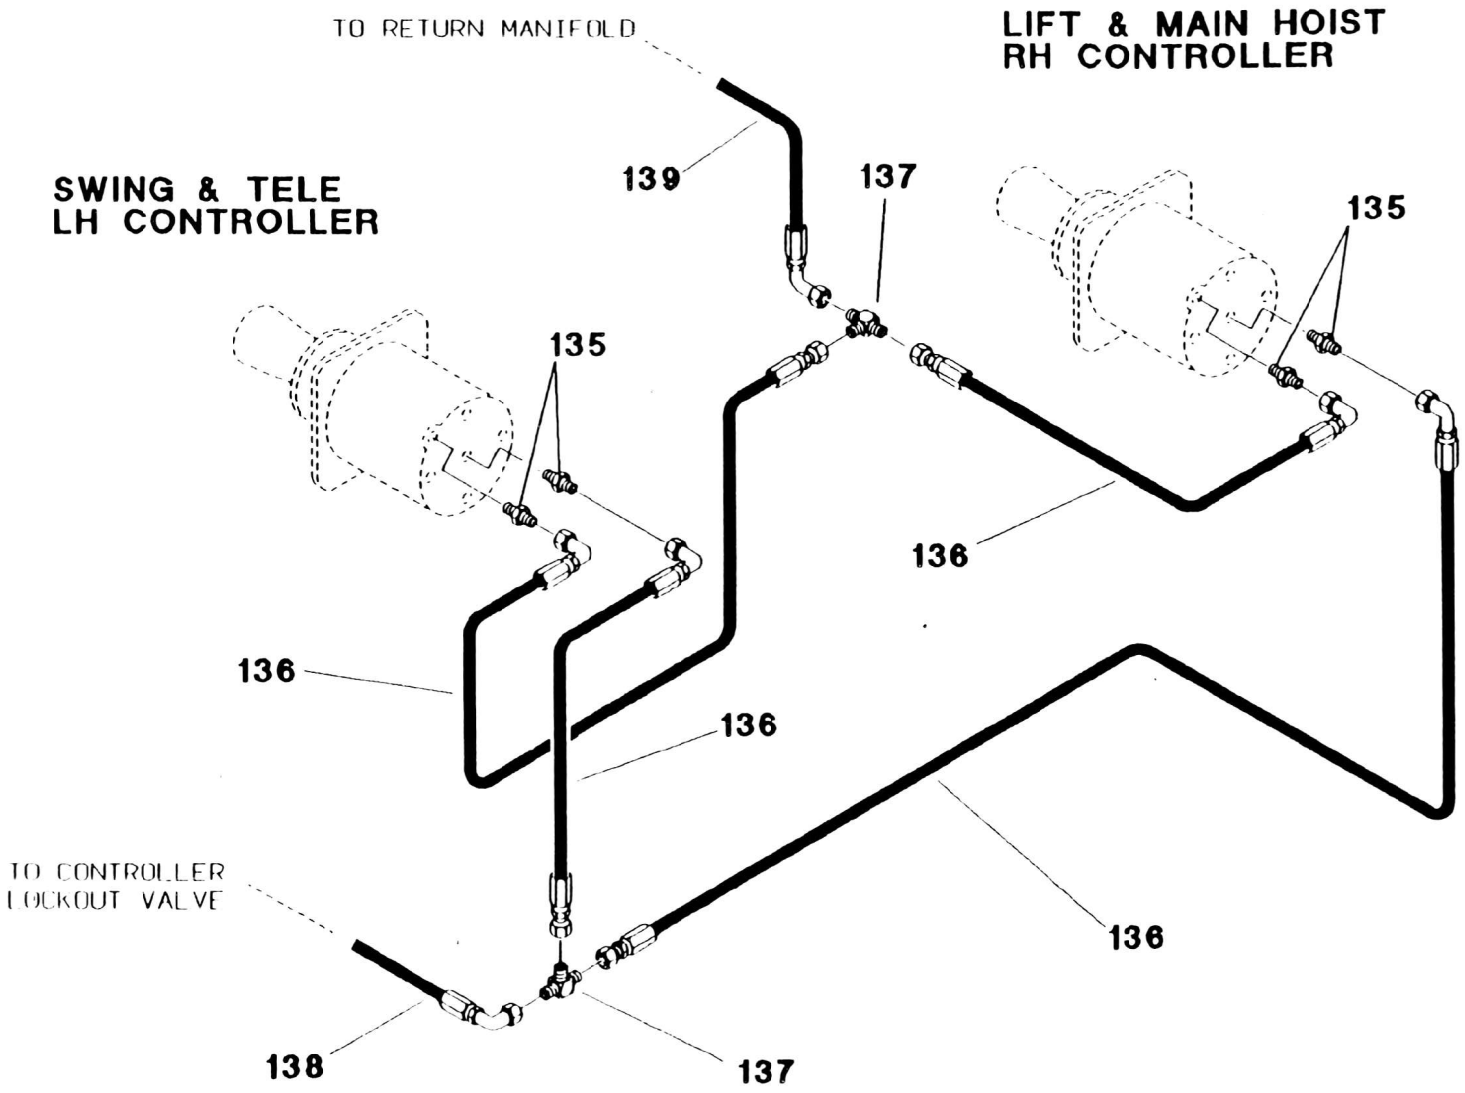
TO RETURN MANIFOLD
LIFT & MAIN HOIST
RH CONTROLLER
SWING & TELE
LH CONTROLLER
139
137
135
135
136
136
136
136
TO CONTROLLER
LOCKOUT VALVE
138
137