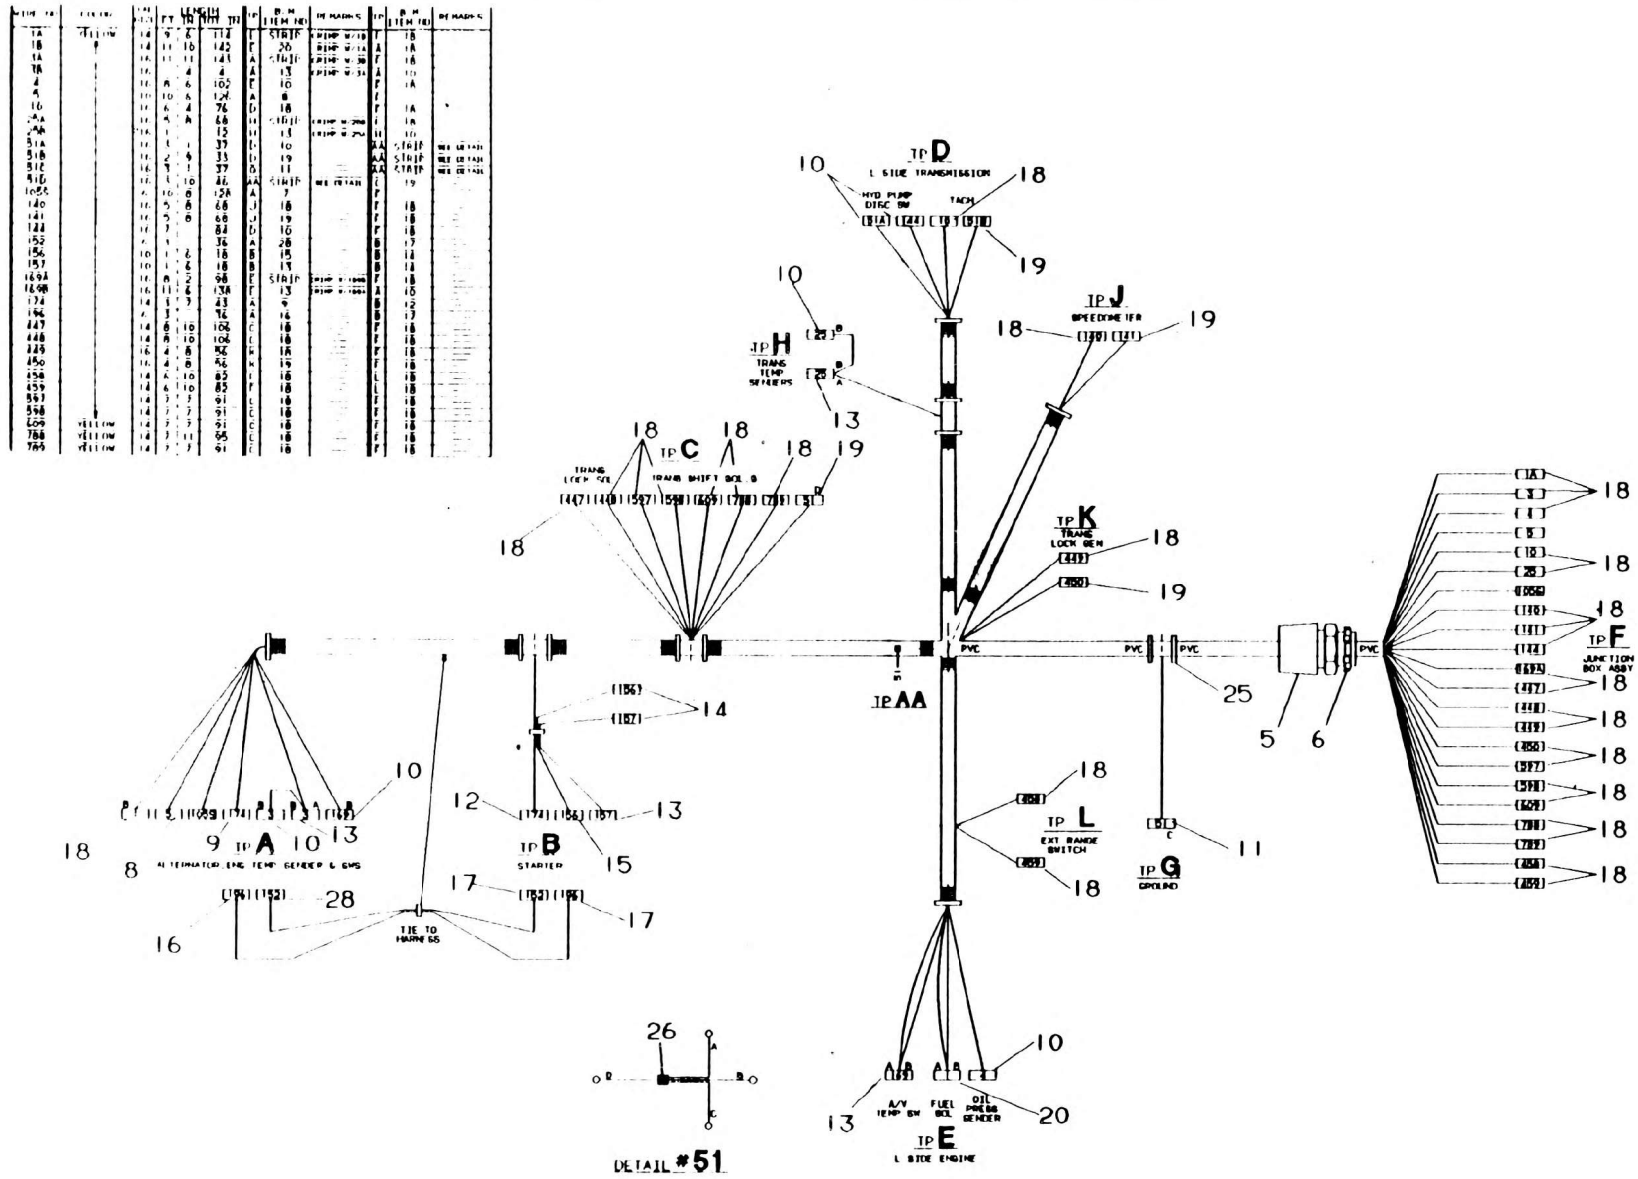
TP D
L SIDE TRANSMISSION
HYD PUMP DISC SW
TACH
TP J
SPEEDOMETER
TP H
TRANS TEMP SENDERS
TP C
TRANS SHIFT SOL B
TRANS LOCK SOL
TP K
TRANS LOCK SEN
TP AA
PVC
TP F
JUNCTION BOX ASSY
TP A
ALTERNATOR ENG TEMP SENDER & EMS
TP B
STARTER
TP L
EXT RANGE SWITCH
TP G
GROUND
TIE TO HARNESS
TP E
L SIDE ENGINE
A/V TEMP SW
FUEL SOL
OIL PRESS SENDER
DETAIL #51