



(SHEET 7 OF 12)


# Manitowoc Cranes

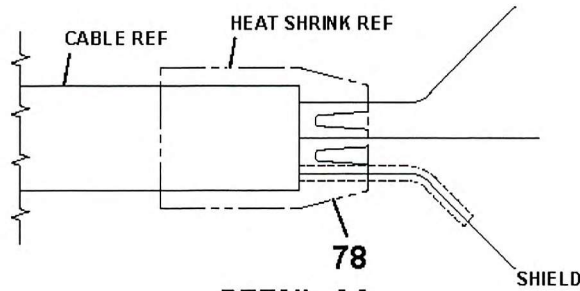


**DETAIL AA**  
CABLE ENDS  
TYP. BOTH ENDS

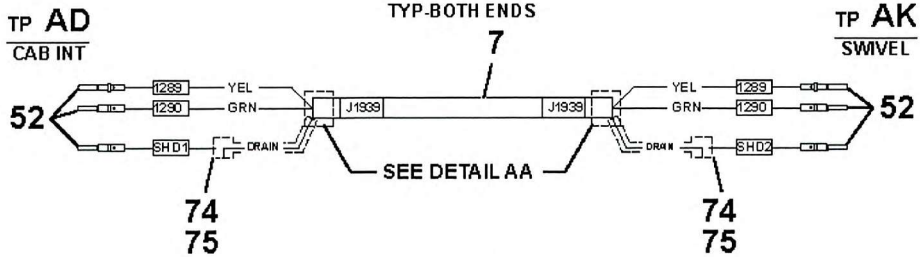


**CABLE DETAIL J1939**

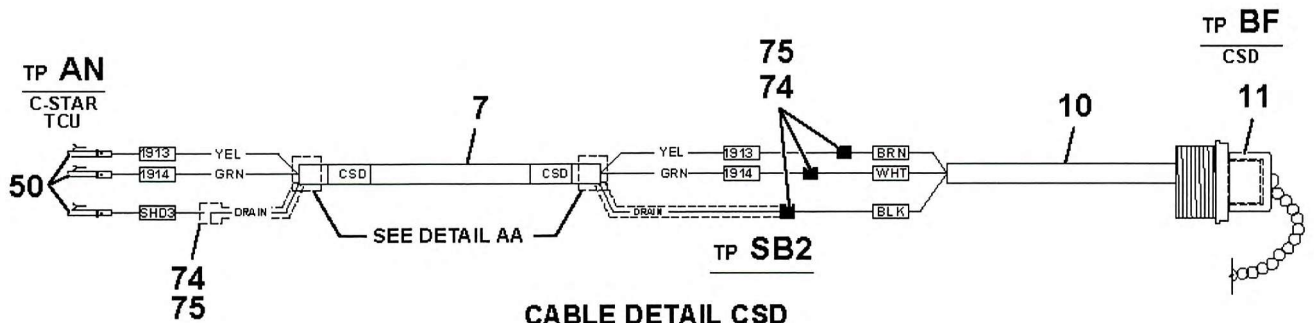

**CABLE DETAIL CSD**

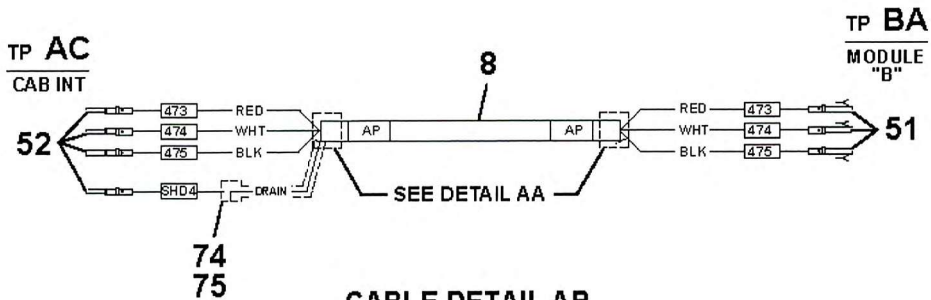


**CABLE DETAIL AP**

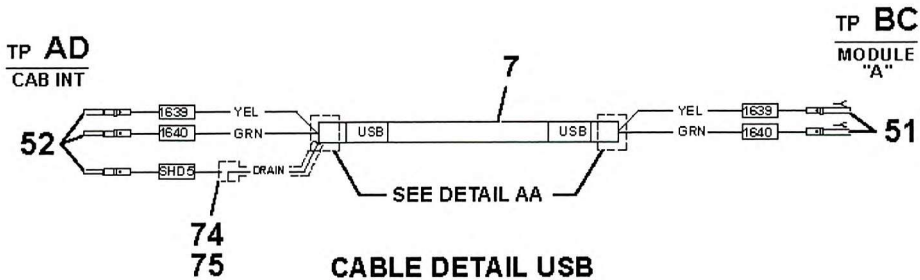


**CABLE DETAIL USB**

80024300

(SHEET 6 OF 12)

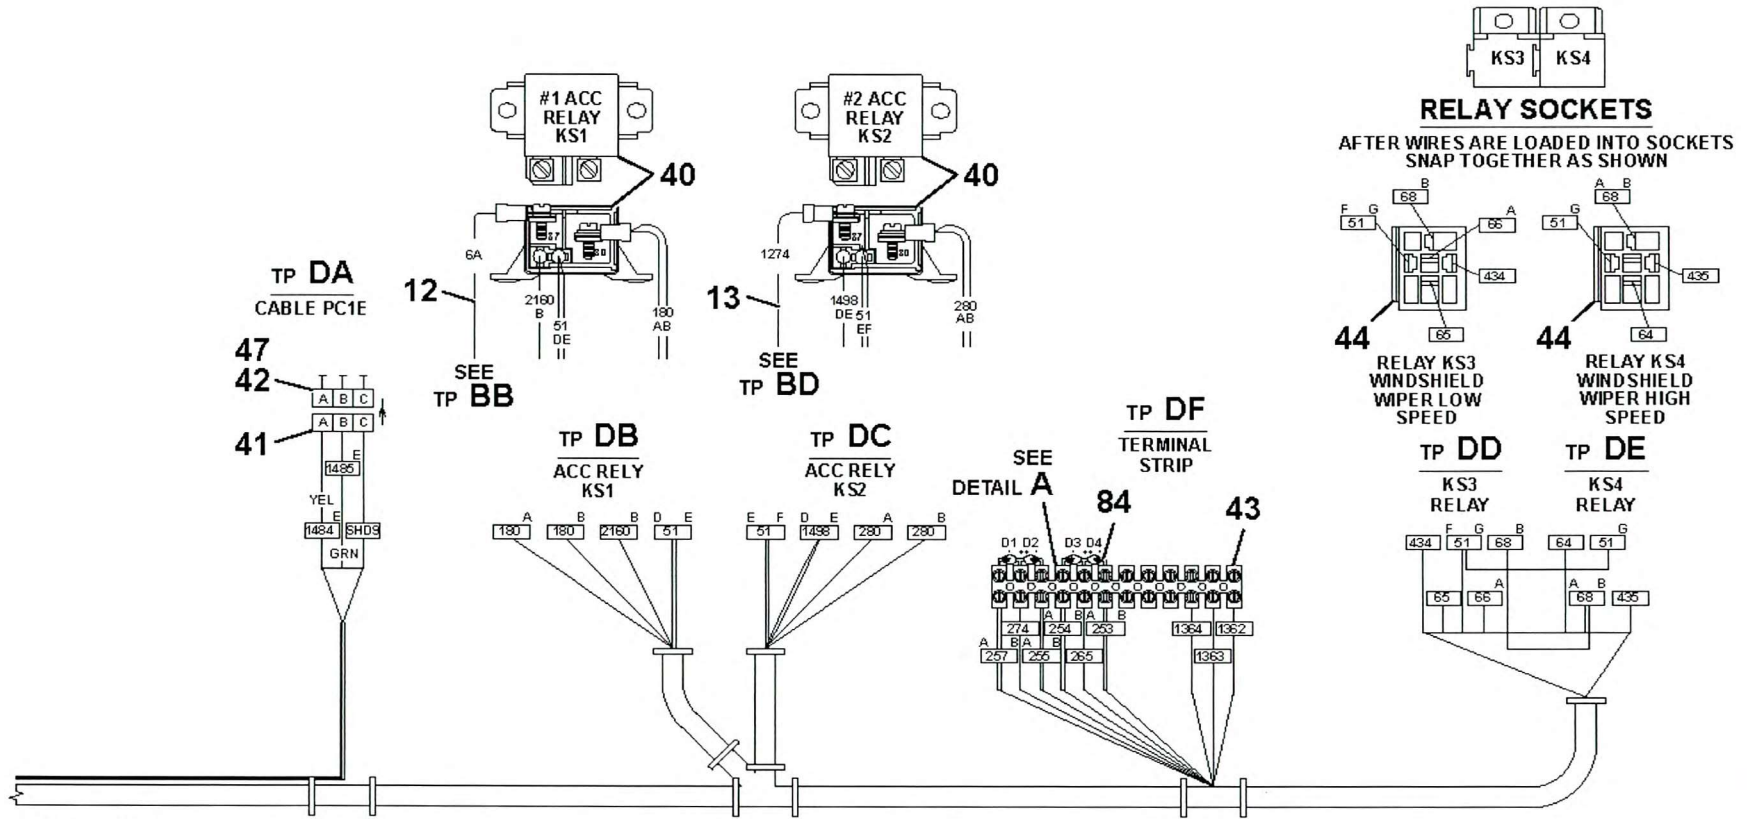


CONTINUED ON SHT 3

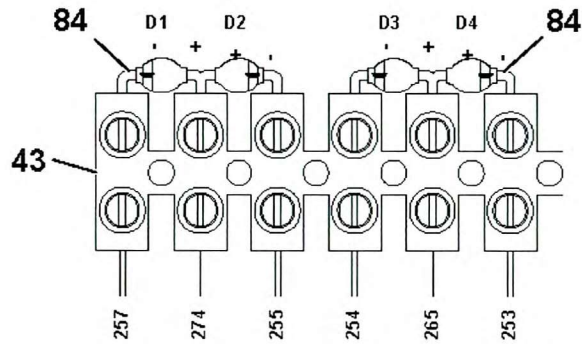


DETAIL A


# Manitowoc Cranes

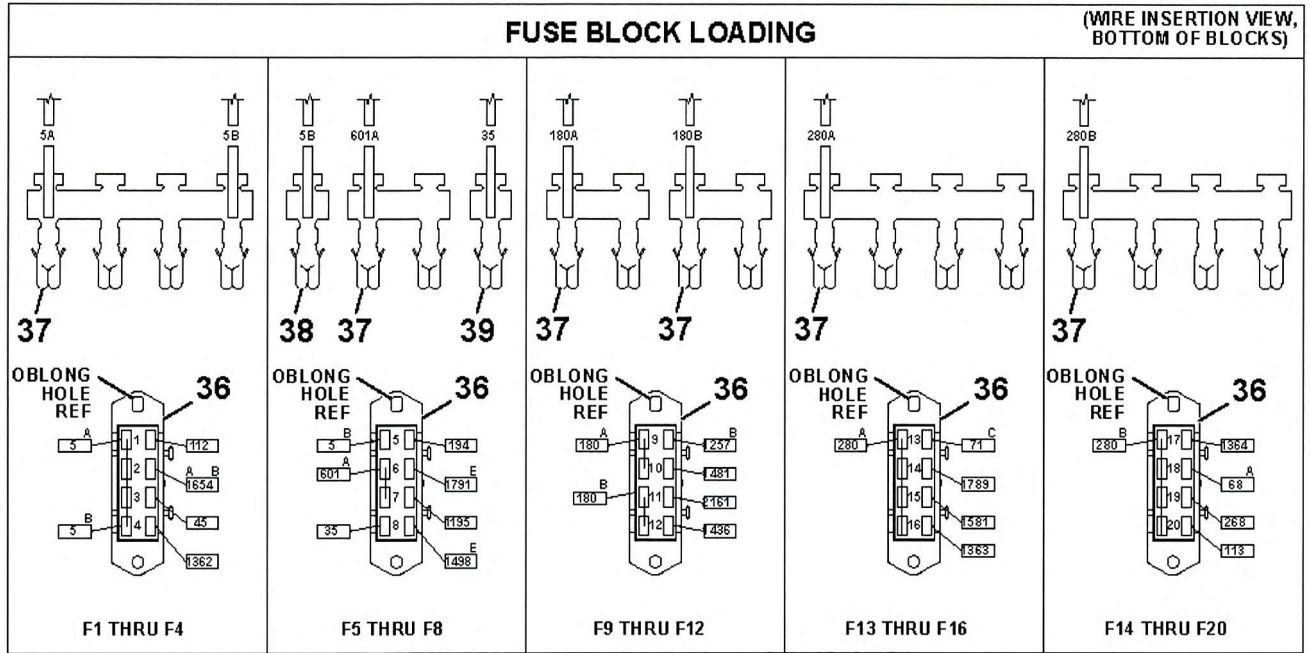

## TOP REAR VIEW

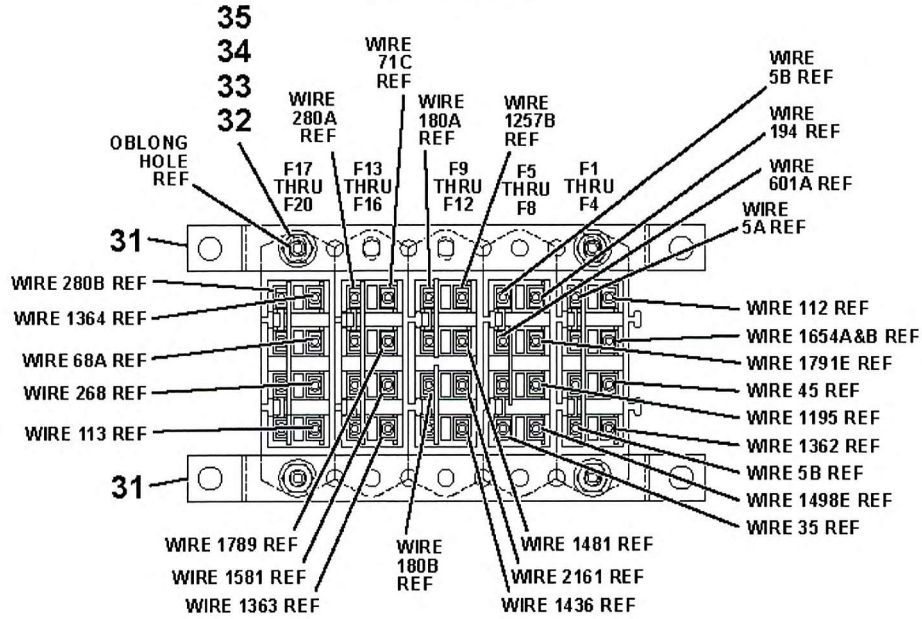

## BOTTOM REAR VIEW

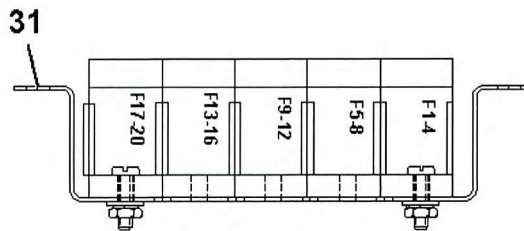

## FUSE BLOCKS




AFTER WIRES ARE LOADED INTO FUSE BLOCKS, LOCK TOGETHER AS SHOWN ABOVE


80024300

(SHEET 4 OF 12)



# Manitowoc Cranes

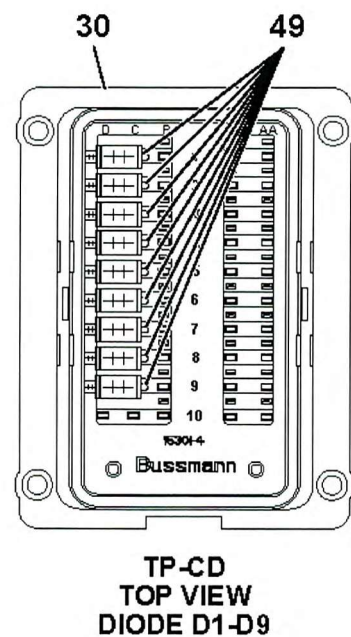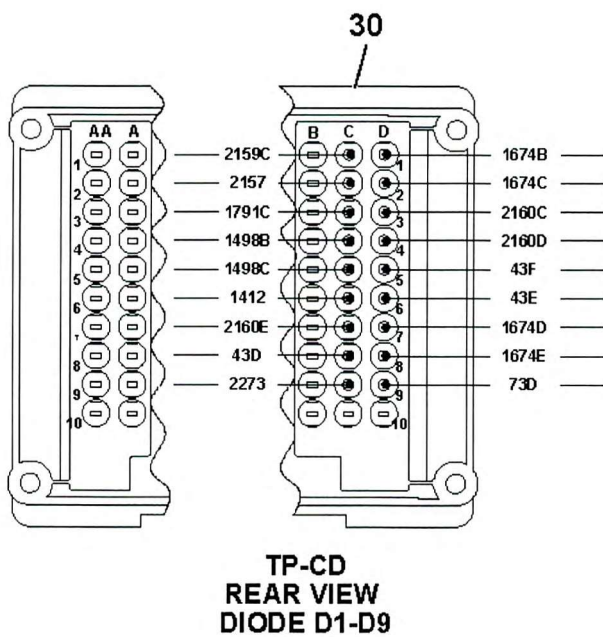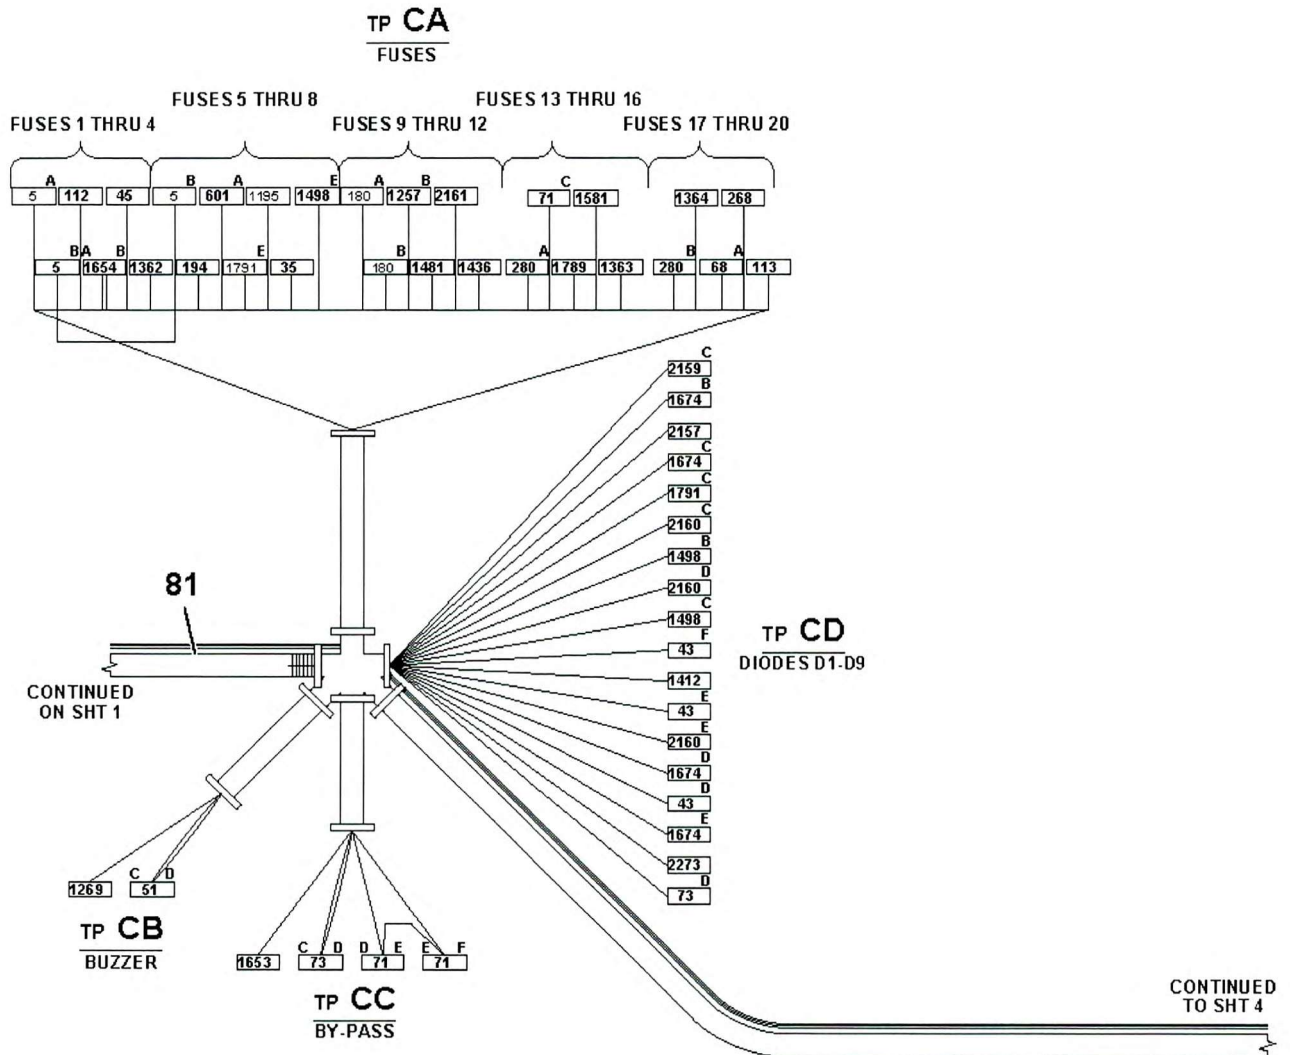

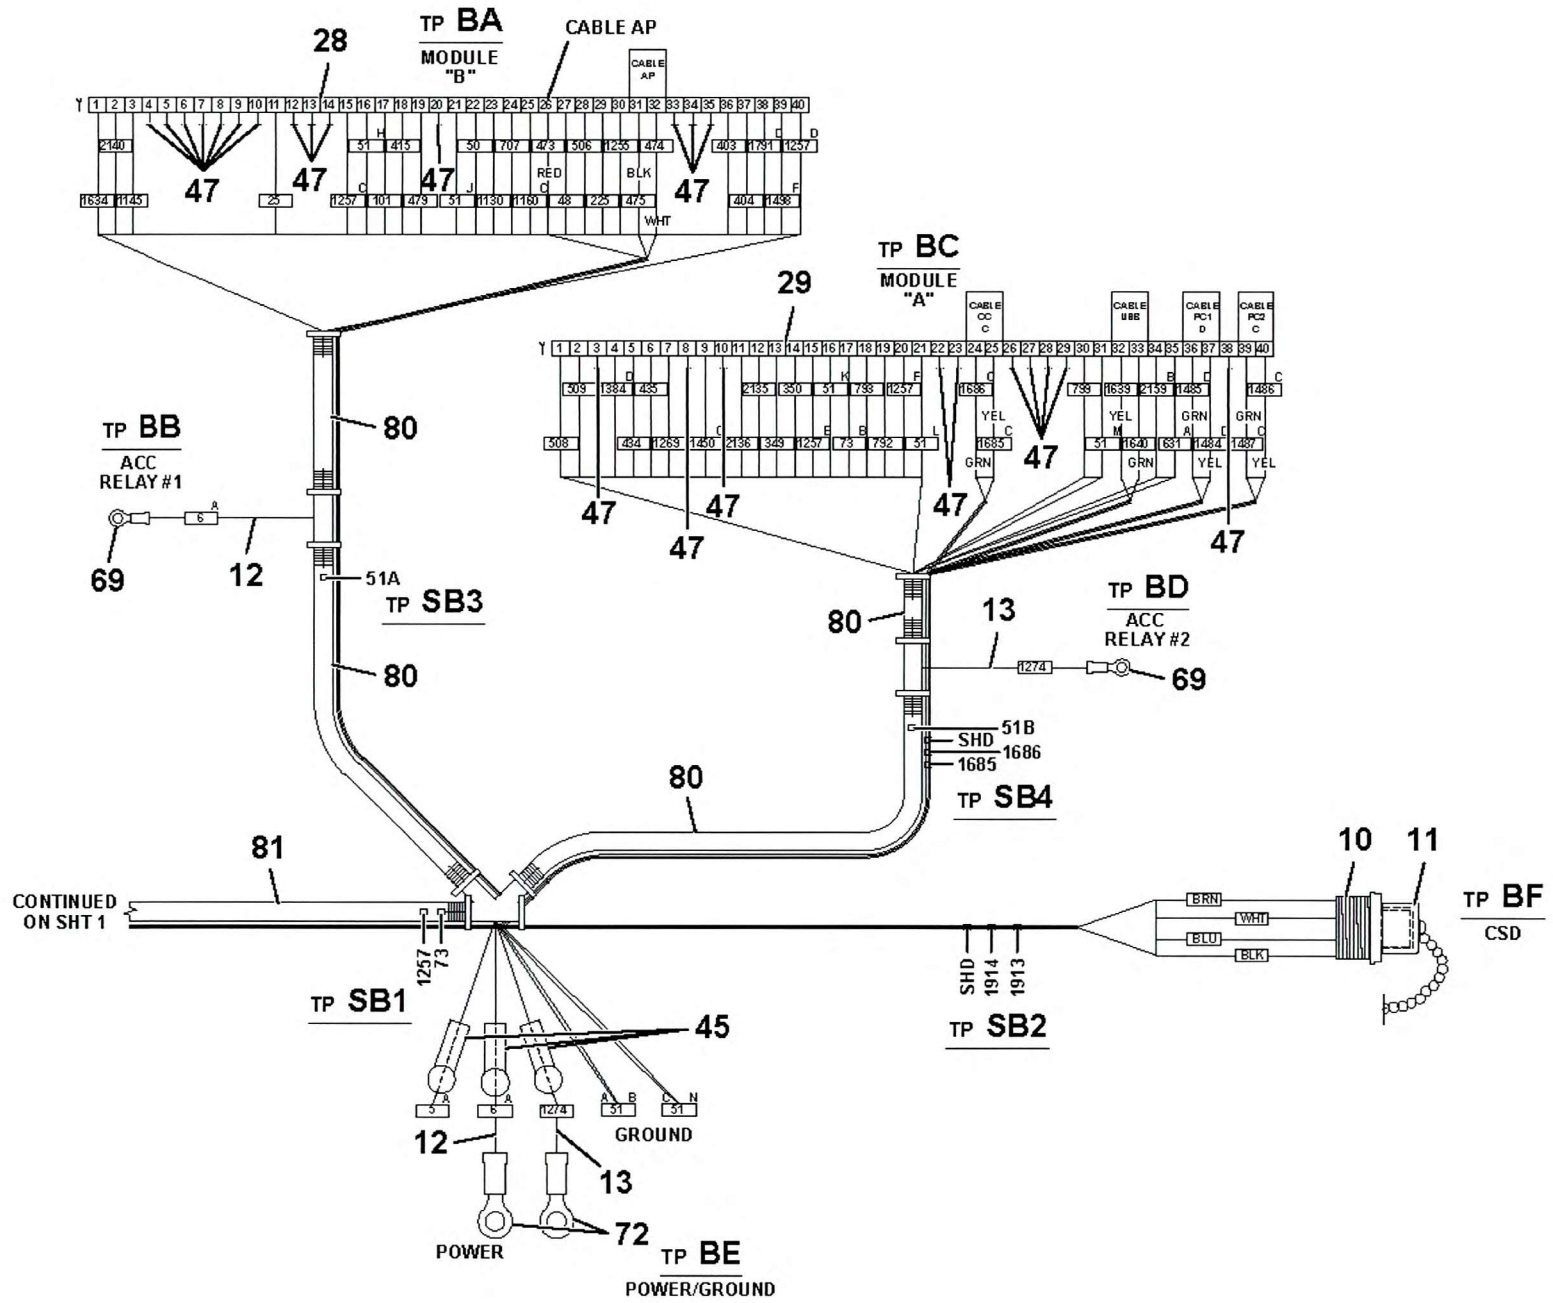

(SHEET 2 OF 12)

