


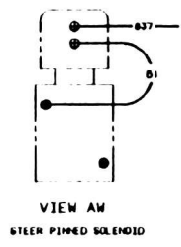
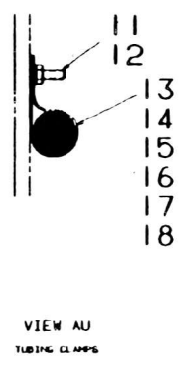
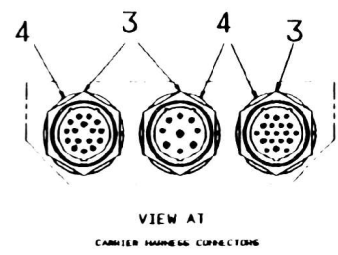
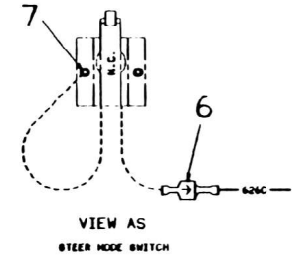
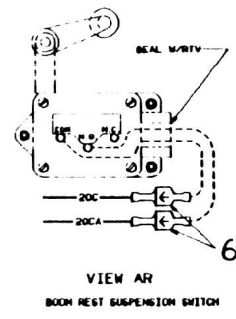
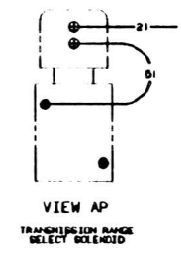
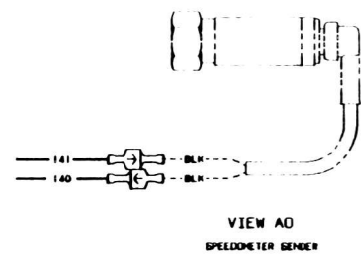
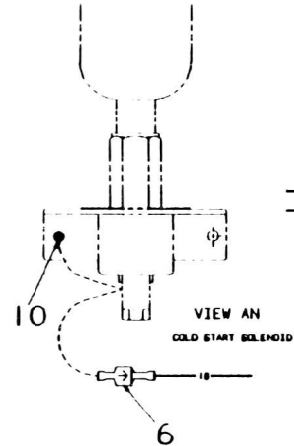
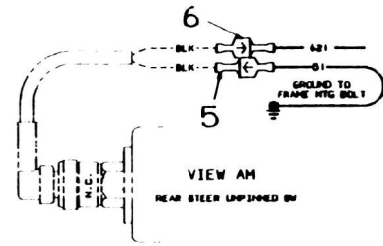
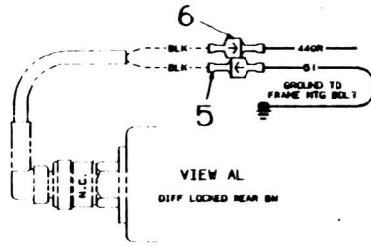
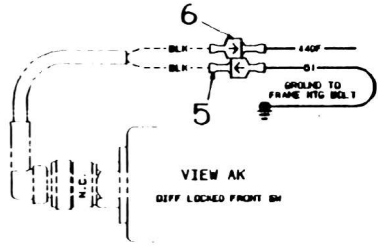
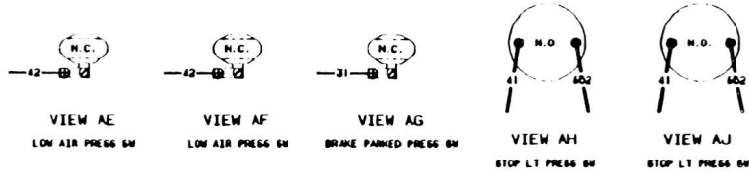
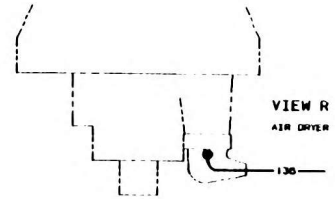
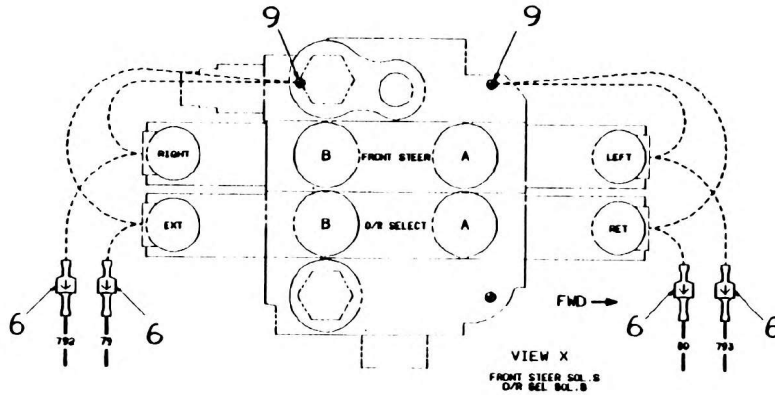
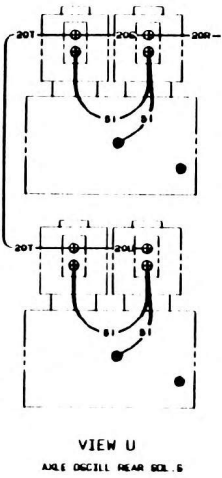
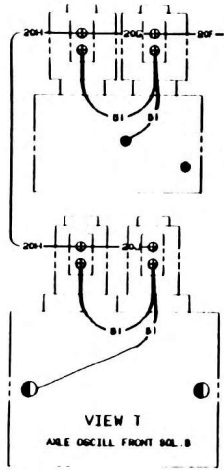
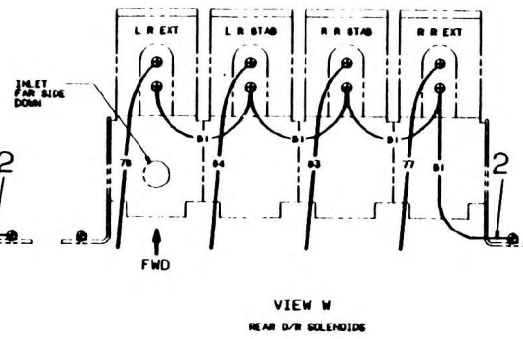
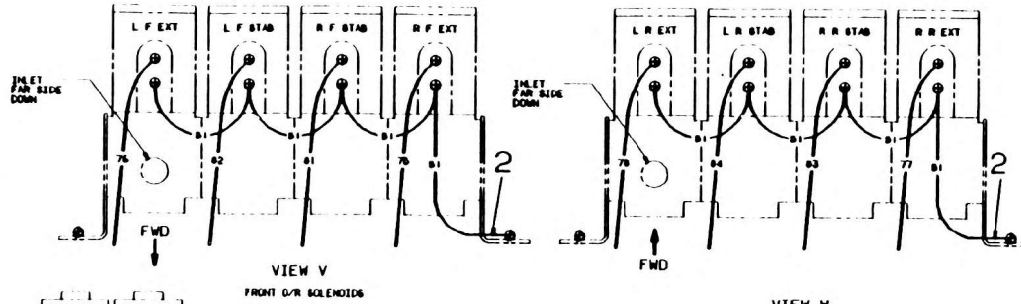
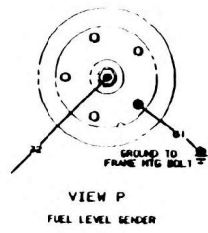
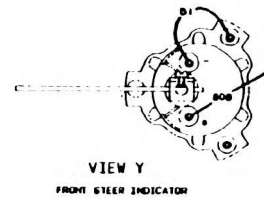
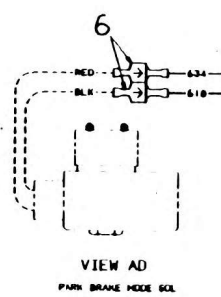



VIEW Z  
ELECT JUNCTION BOX

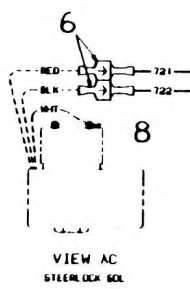



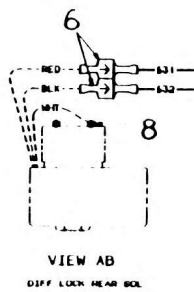


LEGEND	
⊕	WIRE & TERMINAL
⊙	1/4 EYELET
⊚	3/8 EYELET
⊛	1/2 EYELET
⊜	3/4 EYELET
⊝	1/4 FASTON
⊞	3/16 FASTON
⊟	1/2 FASTON
⊠	PISTON
⊡	100 PIN & RECEPT
⊢	140 PIN & RECEPT
⊣	WIRE NUT
⊤	SPLICE
⊥	WIRE DISCONNECT
⊦	PIN GRIP
⊧	MALE PIN
⊨	FEMALE RECEPT
⊩	SHUTTLE POINT ISLAND

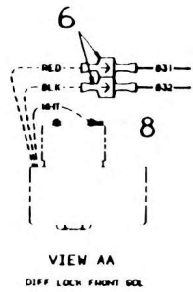

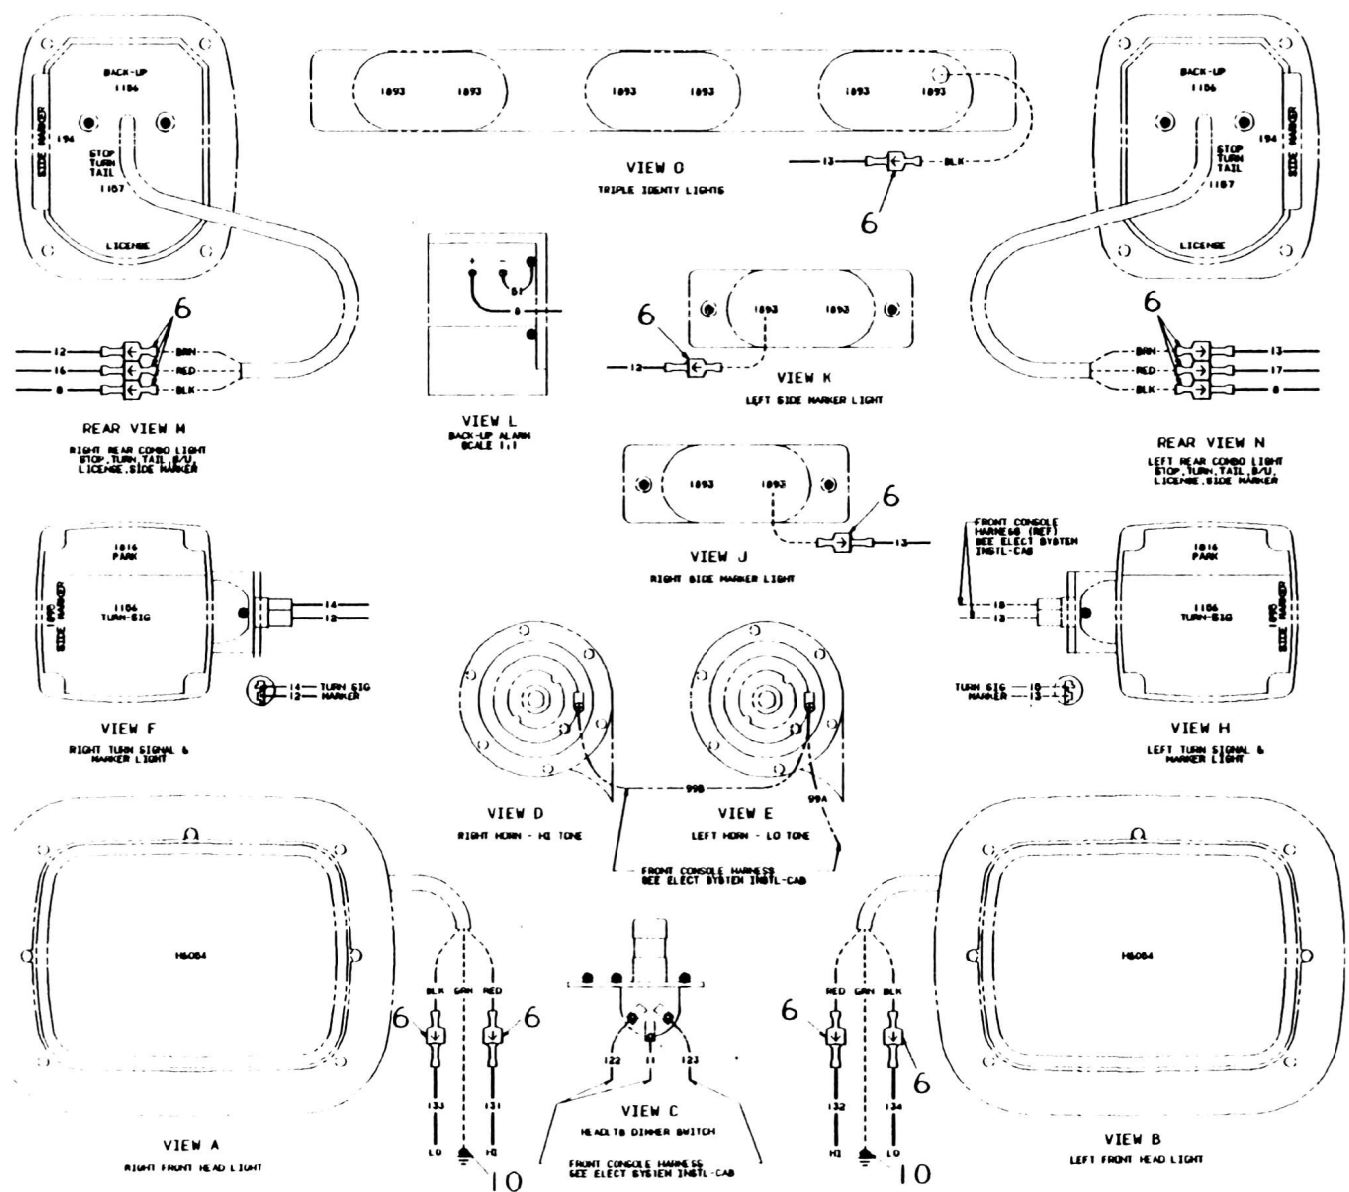

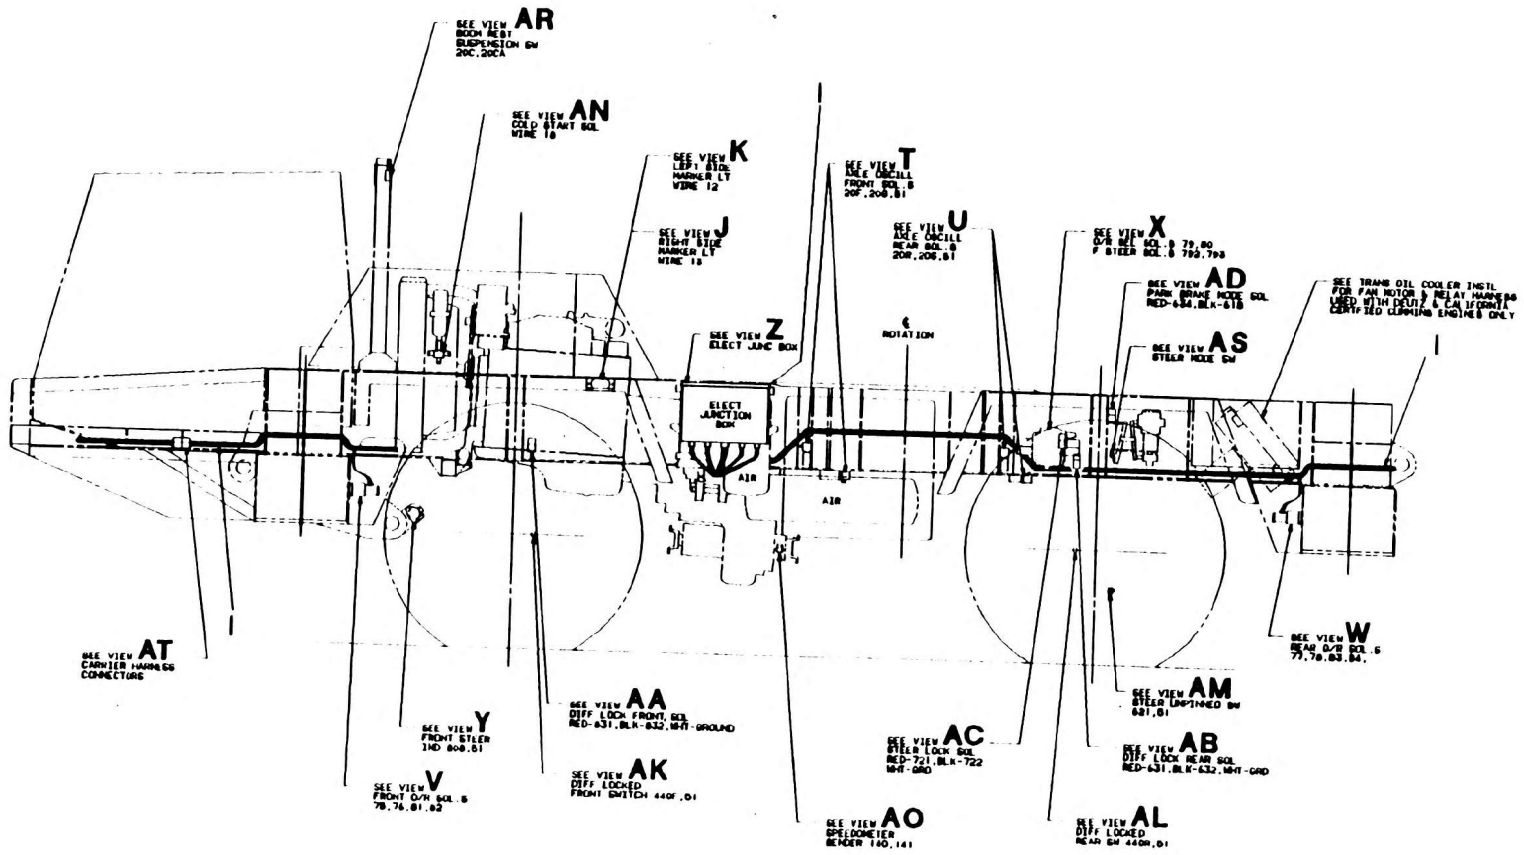

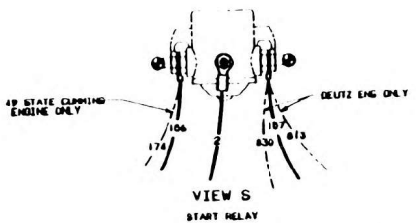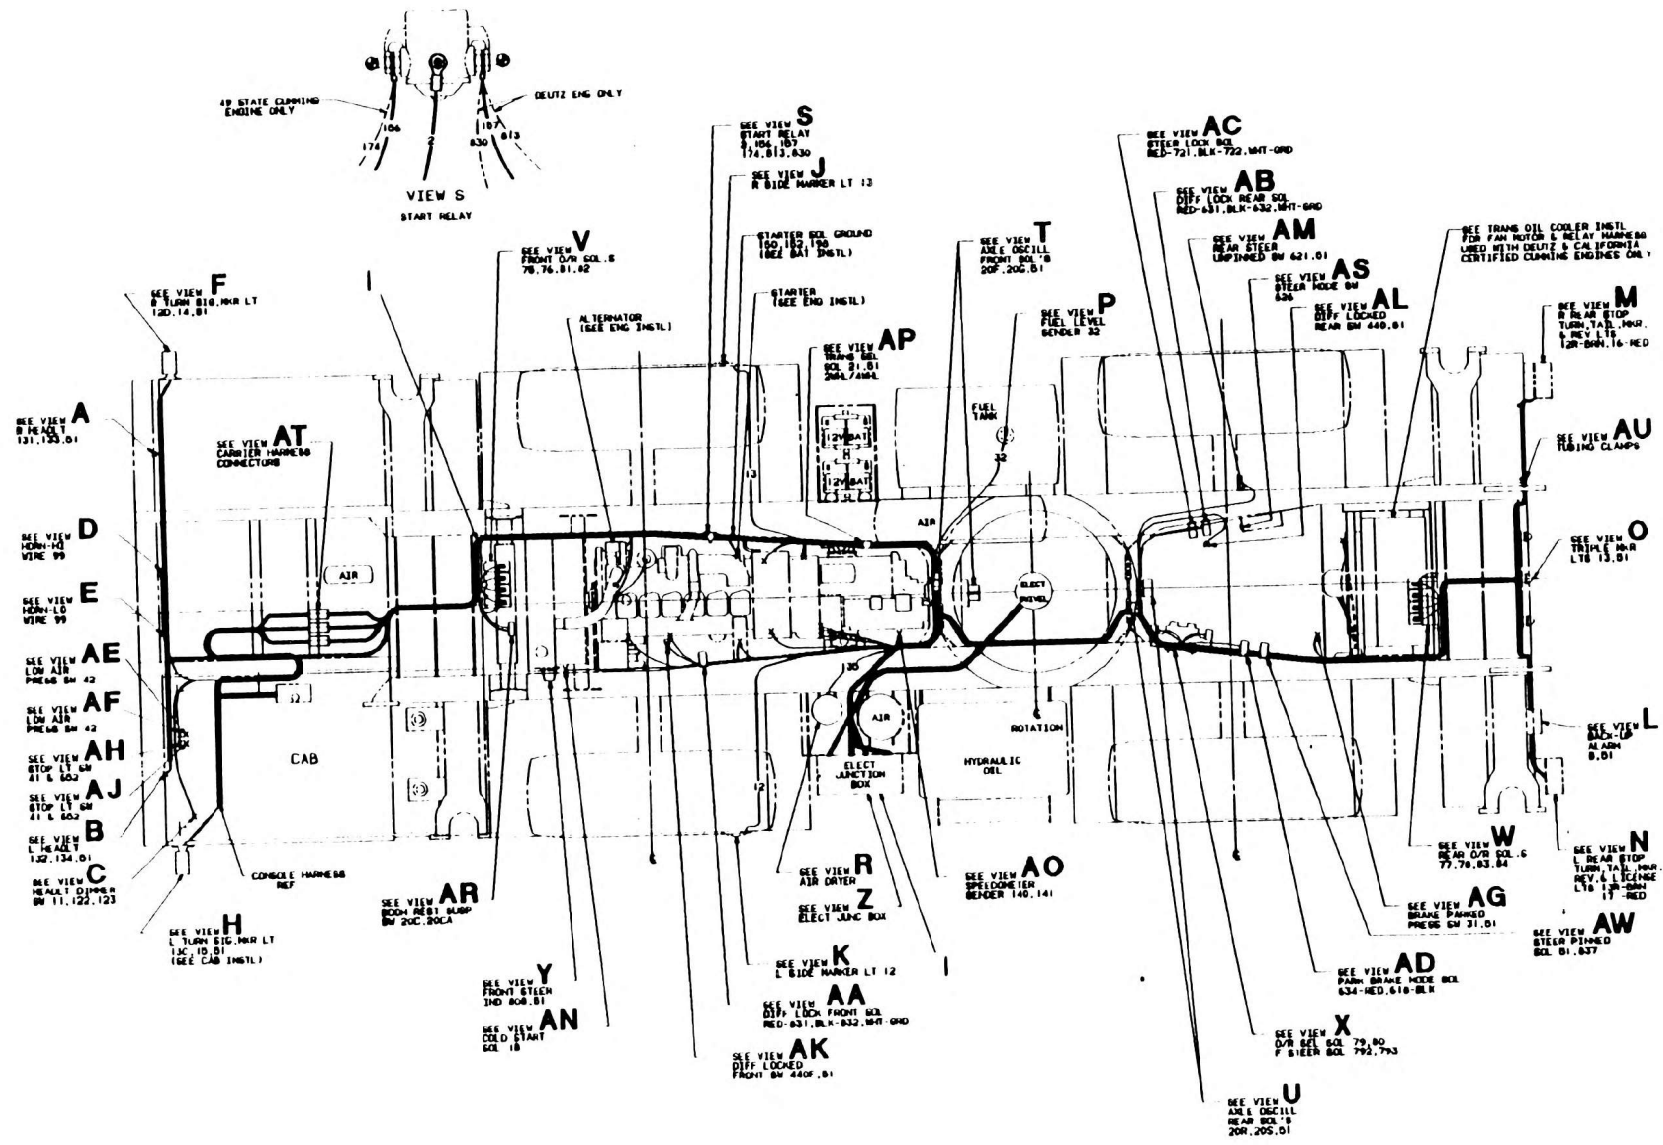

SEE VIEW S  
START RELAY  
106, 107  
174, 813, 830

DEUTZ ENG ONLY

49 STATE CLIPPING  
ENGINE ONLY

**VIEW S**  
START RELAY

SEE VIEW F  
TURN SIG. MR LT  
120, 14, 81

SEE VIEW V  
FRONT OVR SOL. S  
78, 76, 81, 82

SEE VIEW J  
R SIDE MARKER LT 12

SEE VIEW S  
START RELAY  
106, 107  
174, 813, 830

SEE VIEW J  
R SIDE MARKER LT 12

SEE VIEW T  
AXLE OSCILL  
FRONT BOX 18  
20P, 20C, 81

SEE VIEW AC  
STEER LOCK SW  
REG-721, BLK-722, WHT-680

SEE VIEW AB  
DIFF LOCK REAR SOL  
REG-681, BLK-682, WHT-680

SEE VIEW AM  
REAR STEER  
LOCKING SW 421, 01

SEE VIEW AS  
STEER LOCK SW  
624

SEE VIEW AL  
DIFF LOCKED  
REAR SW 448, 01

SEE VIEW M  
REAR STOP  
TURN, YAR. MR.  
L. REY. L.T.S.  
12P-800, 16-RED

SEE VIEW AU  
FLUID CLAMPS

SEE VIEW O  
TURN, YAR. MR.  
L.T.S. 01

SEE VIEW L  
ALARM 8, 01

SEE VIEW N  
REAR STOP  
TURN, YAR. MR.  
REY. & L. REY.  
L.T.S. 12P-800  
17-RED

SEE VIEW AW  
STEER PINNED  
SOL 81, 837

SEE VIEW W  
REAR OVR SOL. G  
77, 78, 83, 84

SEE VIEW AG  
BRAKE PINNED  
PREG SW 31, 01

SEE VIEW AD  
PARK BRAKE HOLD SW  
634-RED, 619-BLK

SEE VIEW X  
OVR REL SOL 79, 80  
P REER SOL 792, 793

SEE VIEW U  
AXLE OSCILL  
REAR BOX 18  
20P, 20C, 81

SEE VIEW AO  
ELECT JUNC  
BENDER 140, 141

SEE VIEW R  
AIR ORDER

SEE VIEW Z  
ELECT JUNC BOX

SEE VIEW K  
L SIDE MARKER LT 12

SEE VIEW AA  
DIFF LOCK FRONT SW  
REG-631, BLK-632, WHT-680

SEE VIEW AK  
DIFF LOCKED  
FRONT SW 440P, 81

SEE VIEW Y  
FRONT STEER  
1ND 808, 81

SEE VIEW AN  
COLD START  
SOL 18

SEE VIEW H  
TURN SIG. MR LT  
13C, 1D, 81  
(SEE CAB INSTL)

SEE VIEW C  
HEATL DIPPER  
SW 11, 122, 123

SEE VIEW AJ  
STOP L.S. SW  
41 & 602

SEE VIEW AH  
STOP L.S. SW  
41 & 602

SEE VIEW AF  
LOW AIR  
PREG SW 42

SEE VIEW AE  
LOW AIR  
PREG SW 42

SEE VIEW E  
WIRE 99

SEE VIEW D  
WIRE 99

SEE VIEW A  
FRONT WIRE 131, 133, 81

SEE VIEW AT  
CAB WIR HARNESS  
CONNECTOR

SEE VIEW I  
ALTERNATOR  
(SEE ENG INSTL)

SEE VIEW AP  
STARTER SOL GROUND  
100, 102, 190  
(SEE S&I INSTL)

STARTER  
(SEE ENG INSTL)

FUEL TANK

AIR

ELECT JUNCTION BOX

HYDRAULIC OIL

ROTATION

CAB

CONSOLE HARNESS  
REF